Tm-RS485-MB / Tm-RS485-MT





Short Description

Our module and surface temperature sensors come equipped with a stable Aluminum housing and a robust weatherproof cable. Thanks to the use of top quality components the sensors achieve very high accuracy and are ideal for use in field environments (PV module temperature).


All sensors are shipped with a calibration protocol for the measuring amplifier.

The sensors comply to all requirements as per IEC 61724-1 and are suitable for bifacial modules.

Technical Data

Туре	Tm-RS485-MB	Tm-RS485-MT			
Interface	RS485				
Protocol	MODBUS	MT			
Measuring Range	-40 to +90°C				
Uncertainty (-40 to +90°C)	1 K				
Supply Voltage	24 VDC (10 to 28 VDC)				
Current	Typical 25 mA at 24 VDC				
Galvanic Isolation	1,000 VDC between RS485 and Voltage Supply				
Sensor Element	Pt1000 Class A as per EN 60751				
Sensor Housing	Self-Adhesive Aluminium Block, 35 mm x 12 mm x 6 mm				
Sensor Cable (Pt1000)	Length: 3 m, PUR coated, shielded (LiYC11Y, 2 x 0,25 mm²)				
Case Material	Powder Coated Aluminum				
Case Dimension / Protection Level	98 mm x 64 mm x 34 mm / IP 67				
Weight	арргох. 500 g				
Operating Condition	Sensor Element -40 to +90°C (see below Installation Instruction) Case -40 to + 80 °C				
Sensor Connection	Length: 6 m, PUR coated, shielded (LiYC11Y, 4 x 0.14 mm²)				
Customs Tariff Number / HS Code	90 25	19 00			



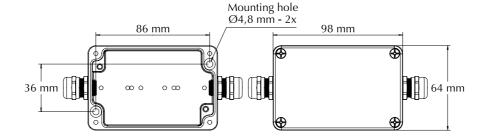



Tm-RS485-MB / Tm-RS485-MT

Module Temperature Sensor with RS485 Interface

Safety Instructions


The installation and assembly of electrical equipment must be carried out by electrically qualified persons. The sensor may not be used with equipment whose direct or indirect purpose is to prevent human death or injury, or whose operation poses a risk to humans, animals or property.

Electrical Connection

The sensors are designed for safety extra-low voltage (SELV) operation.

The cable shield shall be connected to the PE during installation.

WARNING: Connecting the supply voltage to the signal lines will damage the device.

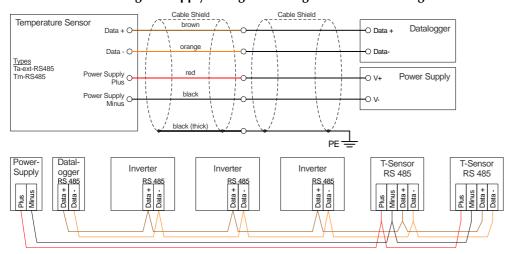

Modbus Note: All bus participants with Modbus protocol (RTU) identical Modbus parameters but different address.

Maximum additional cable length for sensors with 6 m connection cable at voltage supply of 24 VDC / 12 VDC

Cable Cross Section								
0.14 mm^2	0.25 mm^2	0.34 mm^2	0.5 mm^2	0.75 mm^2	1.0 mm ²	1.5 mm^2		
300m / 50m	600m / 100m	800m / 150m	1000m / 200m	1000m / 300m	1000m / 400m	1000m / 650m		

Installation Instructions

The sensor element is mounted by gluing the Aluminum block directly to the measurement surface. The surface must be dry, clean and degreased. Cleaning should NOT be done with glass cleaner, as some glass cleaners contain additives to prevent soiling after cleaning and these additives also prevent adhesion. Isopropyl Alcohol or Ethanol is recommended for cleaning. It is also recommended using an extra fixing with silicone or Sikaflex, particularly for module




temperature above 75°C. If mounted outdoors, avoid direct exposure to sunlight and rain to the sensor housing (Aluminum block). If necessary, provide protection from the sun

and rain.

The through holes used to fix the sensor to a stable and suitable surface shall be accessible when the housing is opened. The tightening torque of the case cover is 180 Ncm.

Note: The module temperature measurement can be optimized by completely covering the sensor element.

The sensor cable needs a cable grip close to the sensor housing.



Maintenance

Scope of the regularly check (at least every 2 years): Cleaning, external damage, mechanical fastening, cable laying and any damage to the cable.

Should damage be found that degrades the function or safety, the sensor is to be replaced.

A recalibration is recommended at least every 3 years.

User information

The sensor is designed for the measurement of a surface temperature. The warranty is for 1 year from the date of the invoice for the intended use. M&T does not accept any liability for possible losses or damage due to the incorrect usage of the sensor. Liability for consequential damages is excluded.

Page 2 of 2 Date: April 2023 Errors and changes excepted